 



TT22/TC20/TN72WH

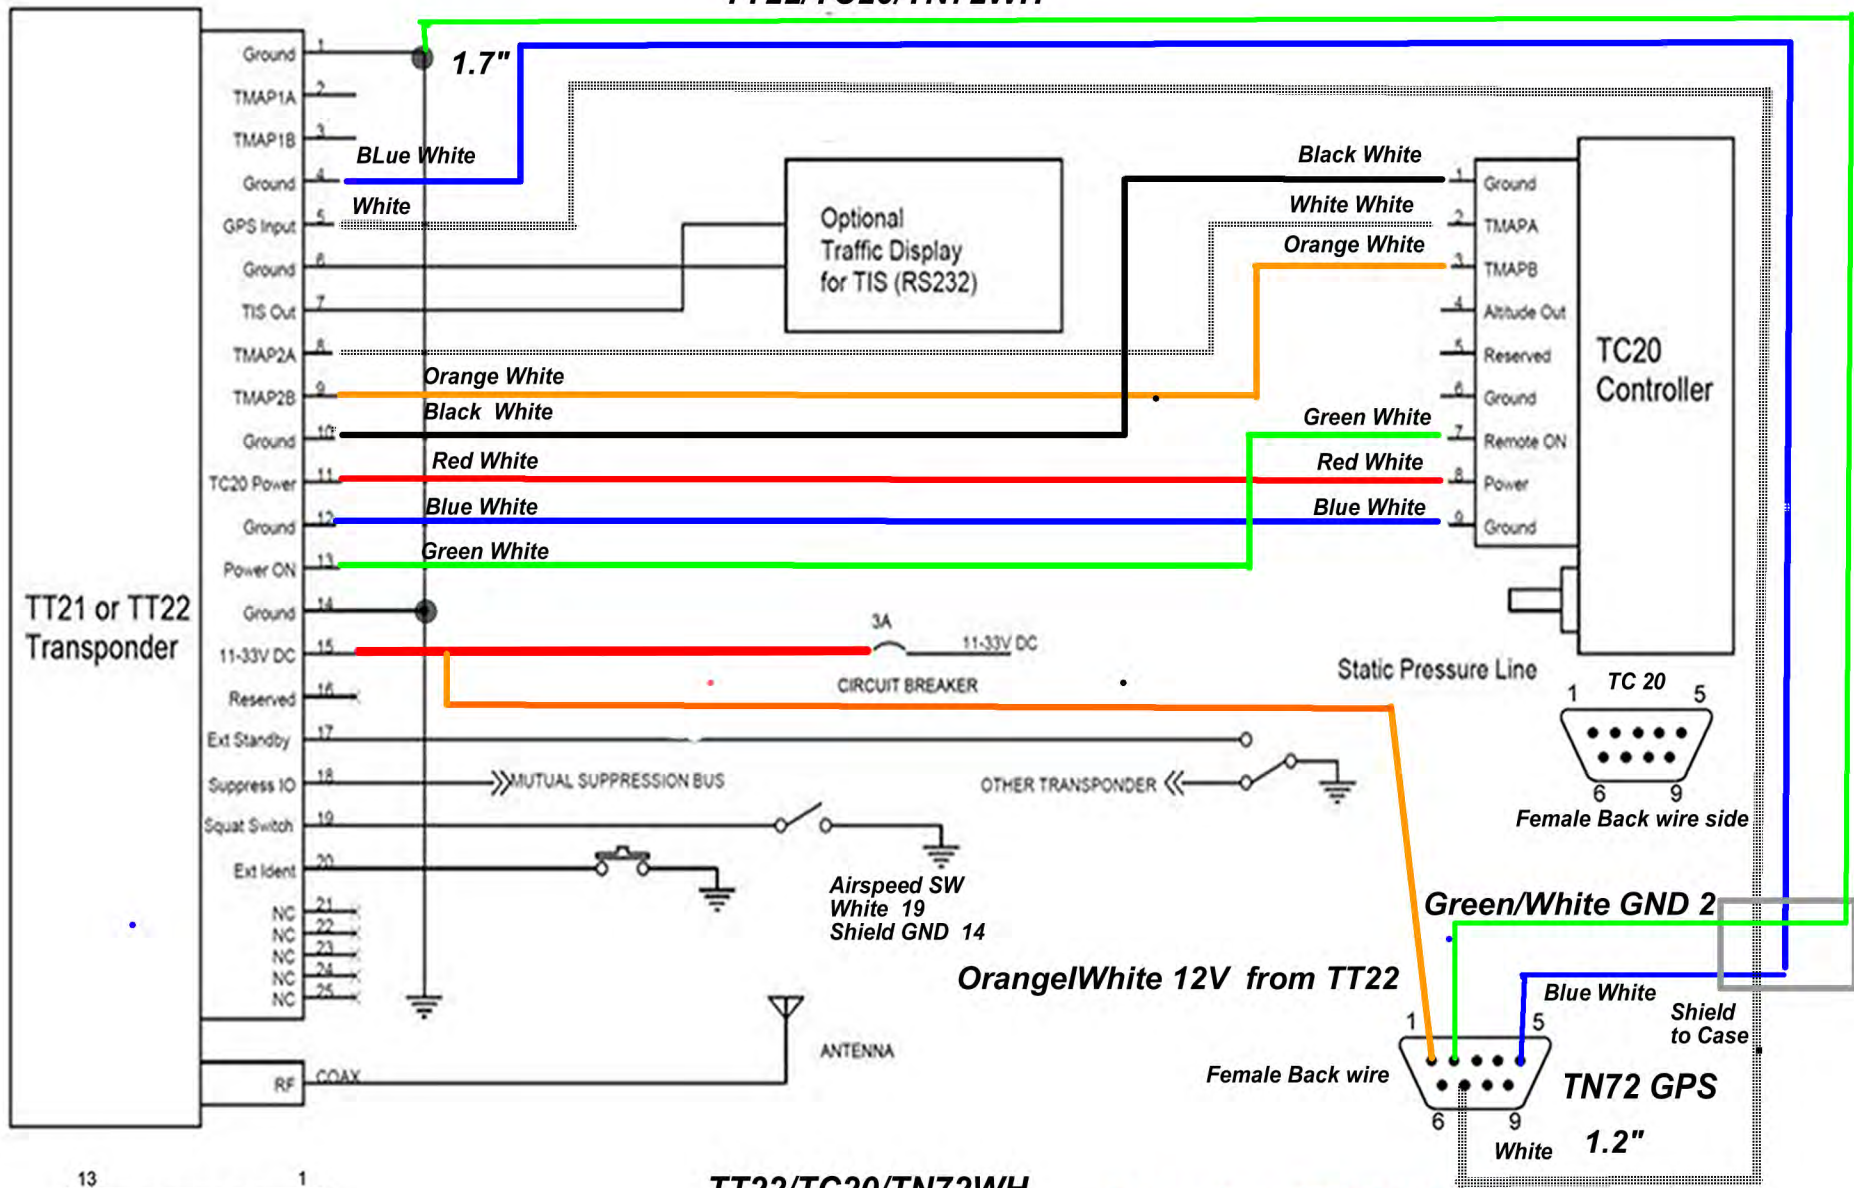

TT22/TC20/TN72WH

- Cable**
- 22TG7T14 - TT22 to TC20
 - 22TG4T14 - TT22 to TN72 shield to case
 - 222TG1 - TT22 to AS
 - 20 GA Red Power
 - 20 GA Black Gnd

Warning !!!!!!!!!!!!!!!
 If you connect the TN72 connector to the TC20 control head and power up you may damage all the instruments ie"let the smoke out" Check to be sure the connectors are to the correct components before powering up.